



Installation Instructions

NOTE: Drive adapter rotation may be varied by using 'D' direct and 'R' reverse drive adapters. Direction of rotation may be changed by switching drive adapters to suit drive cable routing to the synchronizer. See section E in the manual for drive cable connections.

NOTE: Please do not remove inside locknut from the threaded fitting as the adapter has a one half reduction ratio. This threaded end with the locknut should be towards the engine. Refer to section P in the manual for change of rotation procedure.

- 1) Mount Perkins Plate using 4 cap screws and new Gasket
- 2) Install Drive Pin halfway into the engine shaft and halfway into the Drive Joint.
- 3) Screw Drive Joint into plate until the end of the Drive Joint touches the engine gear. DO NOT FORCE.
- 4) Unscrew Drive Joint ONE FULL TURN. Any further Drive Joint adjustments should be made in the counter-clockwise direction.
- 5) Tighten Lock nut.

Perkins 6 / 354 Adapter

SCALE: NO

DATE: 10/1/88

PART # 06060



GLENDINNING MARINE
CONWAY SC 29528